



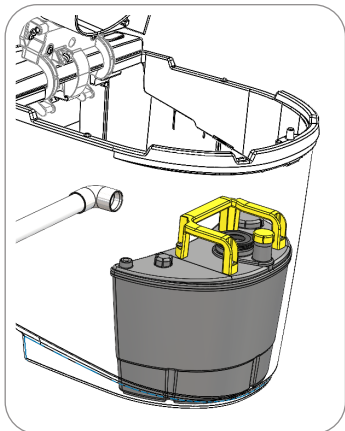


1. Open the lid and have necessary tools ready

*Screwdriver torx T25*

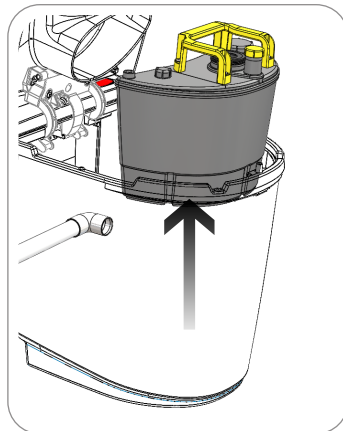


2. Take out the urine container

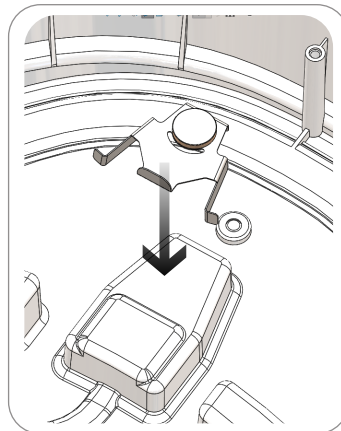


3. Place the magnet holder


*If the toilet is connected to power, the red light goes out*

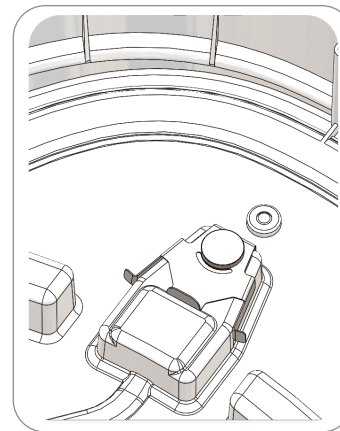


*Place the magnet holder*

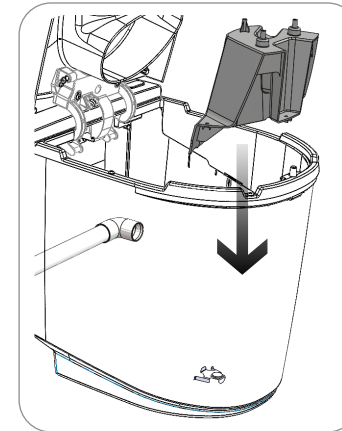


4. Place the assembly base

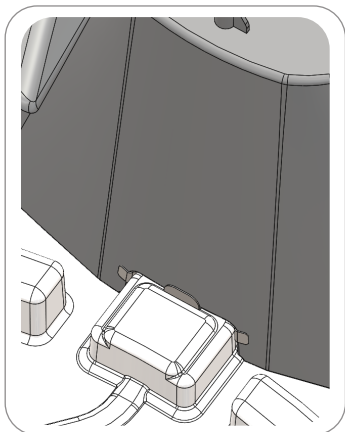


5. Make sure that the three edges of the magnet holder is on the outside of the assembly base

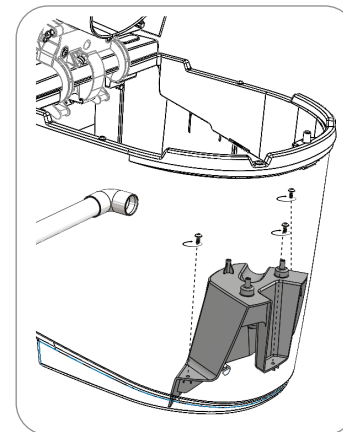


6. Tighten the three screws that keep the assembly base in position

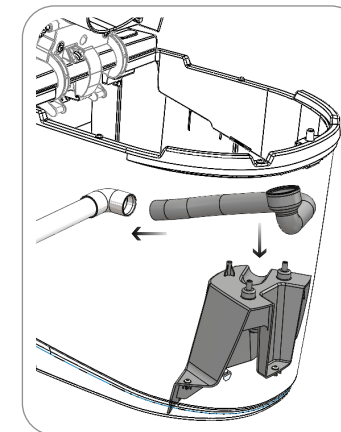

7. Place the urine hose to the connector

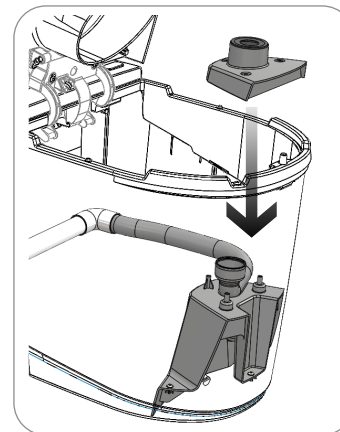

8. Place the fixing block and gasket

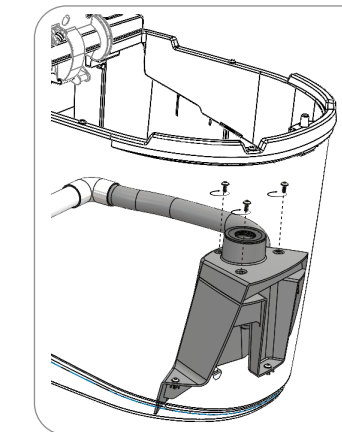

9. Tighten the three screws. Ready to use